

**ATTENTION: READ ALL INSTRUCTIONS ENTIRELY BEFORE INSTALLATION**


**SORELLA™ FOR CHICAGO PLENUM INSTALLATION INSTRUCTIONS**

**⚠** POWER SUPPLY MUST BE INSTALLED IN A CHICAGO PLENUM RATED ENCLOSURE (BY OTHERS) OR IN A NON-CHICAGO PLENUM RATED ACCESSIBLE LOCATION (REFER TO POWER SUPPLY INSTRUCTION FOR MORE INFORMATION).



- BRING CHICAGO PLENUM RATED CONDUIT WITH LOW VOLTAGE WIRES TO EACH SORELLA™ LIGHT LOCATION.

**⚠** REFER TO STANDARD SORELLA™ INSTALLATION INSTRUCTIONS FOR ADDITIONAL PREPERATION INFORMATION

CHICAGO PLENUM RATED CONDUIT AND 1/2 NPT CONNECTOR (BY OTHERS).

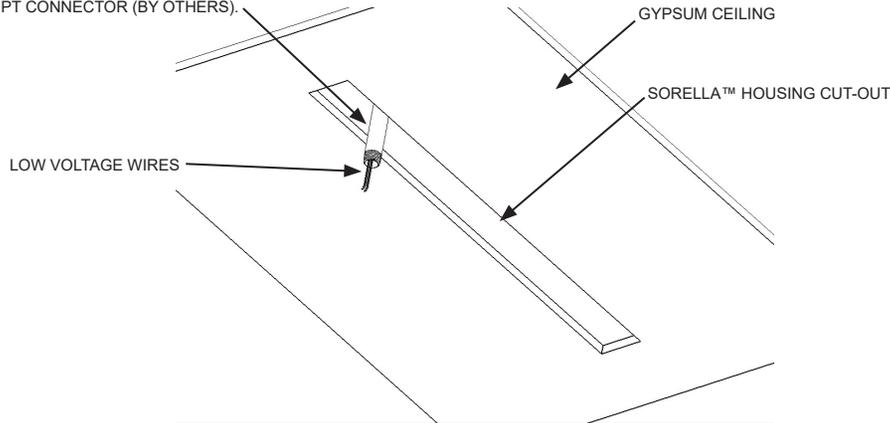

- BEFORE INSTALLING THE SORELLA™ HOUSING, REMOVE THE JUNCTION BOX COVER AND CONNECT THE CONDUIT USING APPROPRIATE CONDUIT CONNECTORS (BY OTHERS) [A]. FEED THE LOW VOLTAGE WIRES THROUGH THE BOTTOM HOLE IN THE JUNCTION BOX AND INTO THE SORELLA™ HOUSING [B].

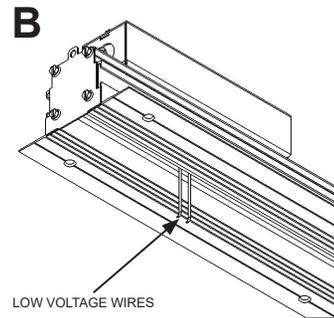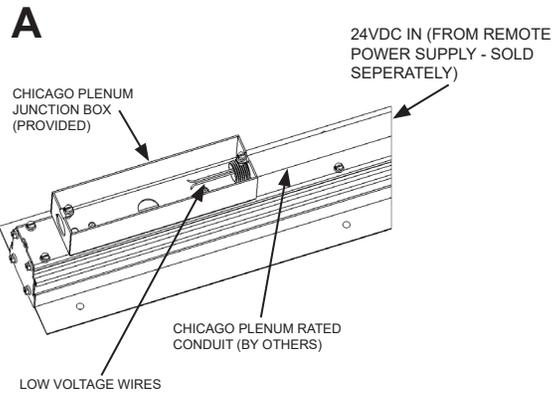


**⚠** IMPORTANT: VERIFY LOW VOLTAGE WIRES ARE PULLED INTO SORELLA™ HOUSING FROM JUNCTION BOX, BEFORE PROCEEDING WITH THE INSTALLATION OF THE SORELLA™ HOUSING.

**ATTENTION: READ ALL INSTRUCTIONS ENTIRELY BEFORE INSTALLATION**

- ONCE THE SORELLA™ HOUSING HAS BEEN CONNECTED TO THE CONDUIT, FOLLOW STEPS 2-3 IN THE STANDARD INSTALLATION INSTRUCTION SHEET TO INSTALL THE SORELLA™ HOUSING INTO THE GYPSUM CEILING

- WHEN READY TO INSTALL LIGHT MODULE, PUSH WIRES INTO CONNECTOR AS SHOWN IN DETAIL A, THEN FEED THE WIRES AND CONNECTOR INTO THE JUNCTION BOX THROUGH THE BOTTOM HOLE. REFER TO STEP 4 ON THE STANDARD INSTALLATION INSTRUCTIONS FOR INSTALLATION OF THE SORELLA™ LIGHT MODULE.

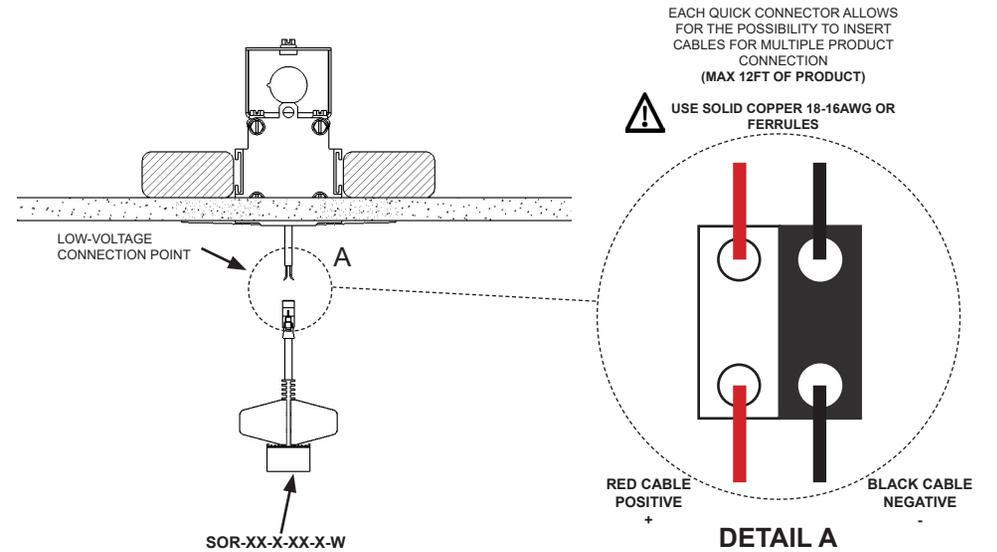

CODE: T-BAR759 Sorella Housing Chicago Plenum Instruction Sheet Rev.02