


Giro Quiet Corner Optic Installation Instruction (ACC-GQCO)



Recommended for use on all illuminated inside corner configurations or at the end of a straight run terminating at a wall (when using the ambient or cove glow optic).



Mechanical Details:

40" Length
White Finish


Installation:

Snap the Quiet Corner baffle into the Giro housing after installing the Giro Light Modules. The Quiet Corner should be installed as close as possible to the internal corner or adjacent wall.

Note: For run lengths shorter than 40", the Quiet Corner baffle can be cut shorter as needed.

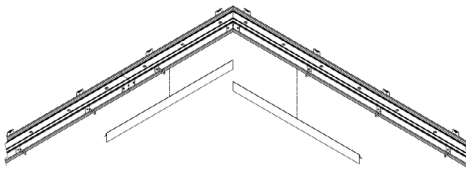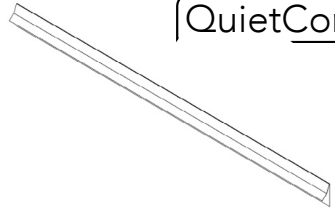


Example of two Quiet Corners used on each side of an internal corner.

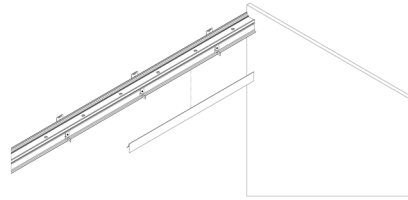


Example of one Quiet Corner used at the end of a straight run terminating at a wall


How to insert the Quiet Corner Optic

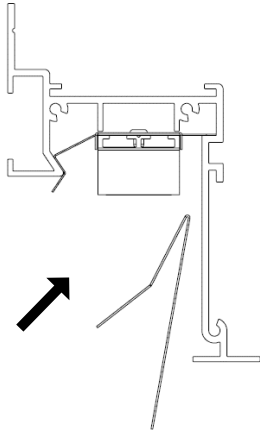

1. After the housing and light modules are installed, position the first quiet corner optic in the proper orientation as seen in the image above.

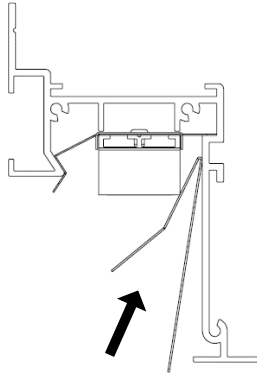

2. Slide the quiet corner optic up into the housing, inserting the bent edge into the gap between the light module and the housing.

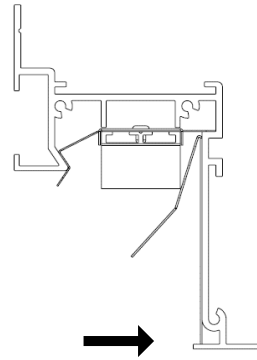

3. Rest the long flat edge along the inner housing flange, securing the quiet corner optic inside the housing.

Note: To remove the Quiet Corner baffle, it is recommended to remove the light module first.

TBAR989: Instruction Sheet: Quiet Corner Installation Insert. Rev.04

ATTENTION: READ ALL INSTRUCTIONS ENTIRELY BEFORE INSTALLATION